

Program List

Program 9 (Strobe White)

Just white color flashes up.

TIPS:

To dim all RGBW lights at once or change the color, first press 'Master ON'. To do this with individual lights, first press 'Zone ON'. Secondly, choose the color or brightness according to the color ring or brightness ring.

For RGB led strip light, the white is mixed from Red, Green and Blue, so the white is not pure.

For RGBW led strip light, the white is pure white.

Linking new lights to the remote controls:


1. Choose which zone you want to assign the light(1 to 4)
2. Switch off the main power supply of the light in the selected zone with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds shortly press one of the 'Zone ON' buttons one time on the remote control.
4. When this link operation is successful, the light slowly blinks 3 times on and off.

Unlinking the lights:

1. Check via the remote control to see which zone (1 to 4) is already linked to a light.
2. Switch off the main power supply of the light with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds press 5 times quickly and shortly on one of the 'Zone ON' buttons which you want to unlink.
4. When this unlink operation is successful, the light quickly blinks 6 times on and off.

Grouping of several lights

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

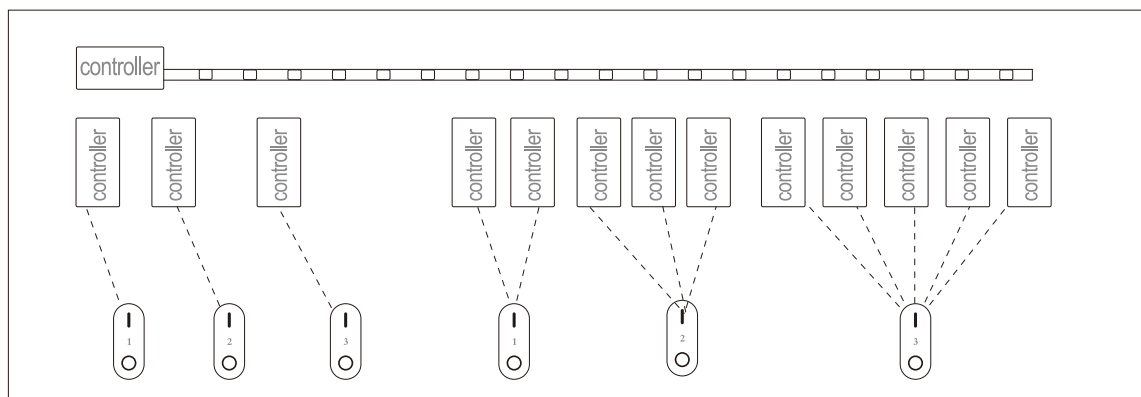

We recommend using rechargeable batteries for the remote controls.

For that reason, we don't include ordinary batteries. We hope you appreciate our environmental friendly choices and they do not cause you any inconvenience.